




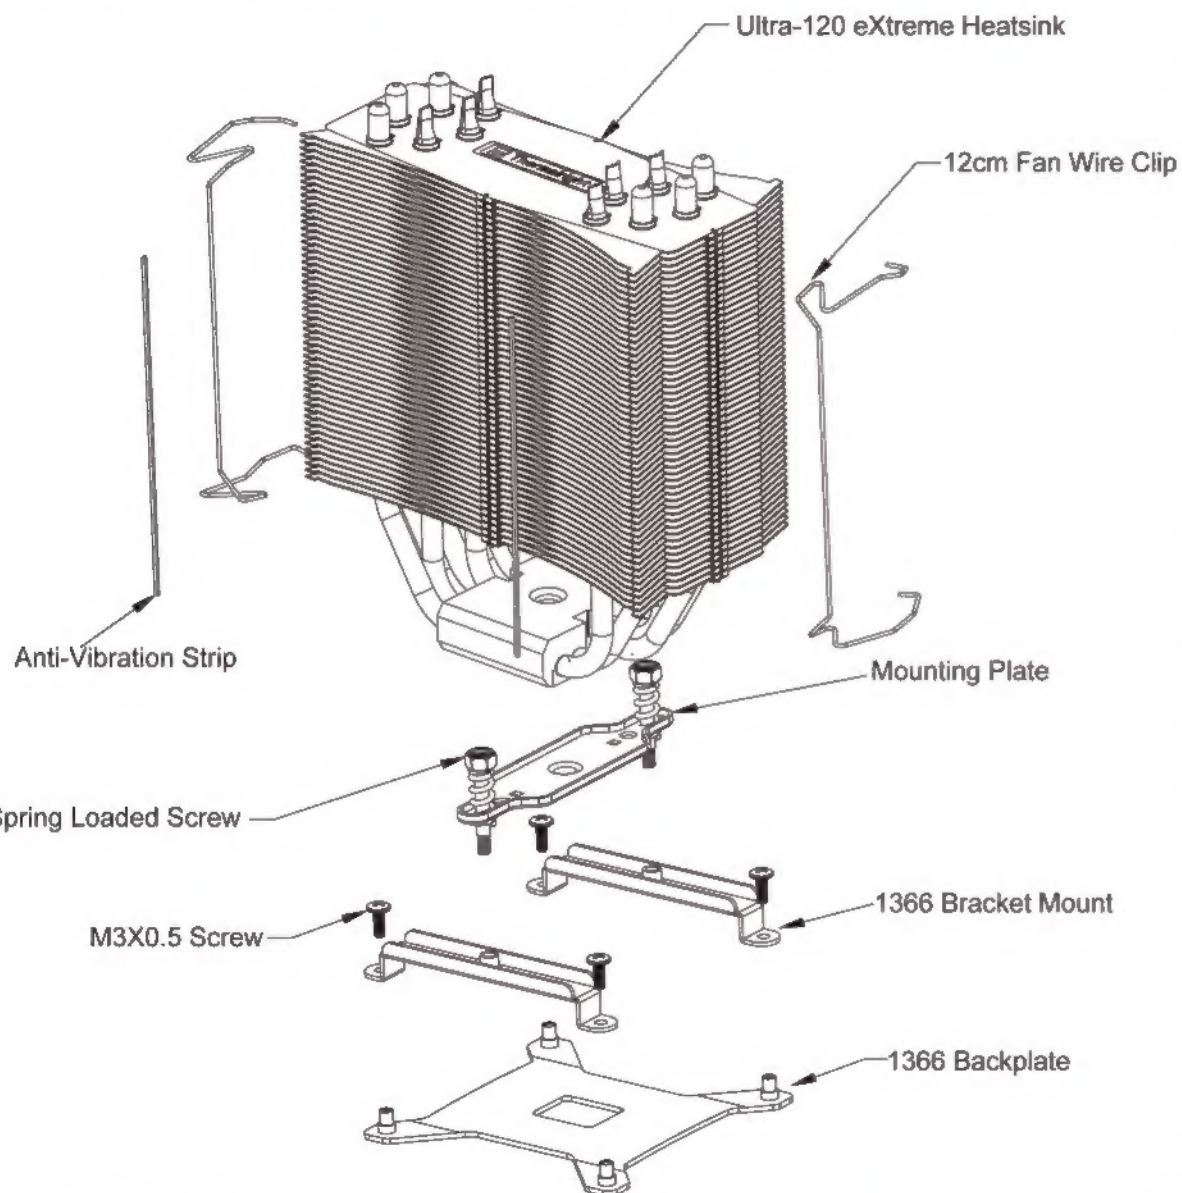

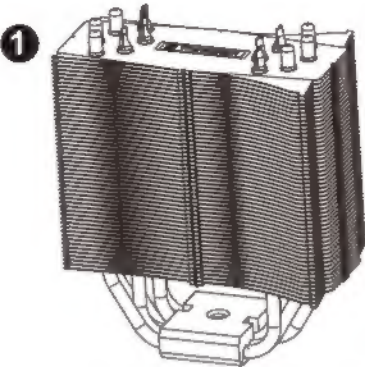

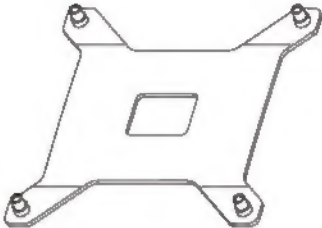



## Exploded View

**Important!** Before proceeding with installation, please check for the most up-to-date instructions at [www.thermalright.com](http://www.thermalright.com)




## Component

 			
   			
   			
Parts Name	Piece(s)	Parts Name	Piece(s)
<b>1</b> Ultra-120 eXtreme Heatsink	1	<b>6</b> Spring Loaded Screw	2
<b>2</b> 1366 Backplate	1	<b>7</b> 1366 Bracket Mount	2
<b>3</b> 12cm Fan Wire Clip	2	<b>8</b> Mounting Plate	1
<b>4</b> Anti-Vibration Strip	2	<b>9</b> Chill Factor Thermal Paste	1
<b>5</b> M3X0.5 Screw	4	<b>10</b> Wrench	1

## Installation Guide

**Important!** Before proceeding with installation, please check for the most up-to-date instructions at [www.thermalright.com](http://www.thermalright.com)


### Step 1:

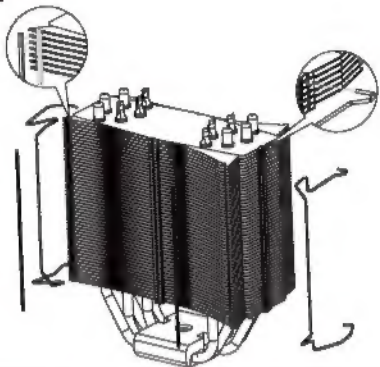

#### Step 1 : Installation of Accessory Parts

Apply the anti-vibration strips to each side of the heatsink. Insert each end of the fan clips into its designated holes on the heatsink.


### Step 2:

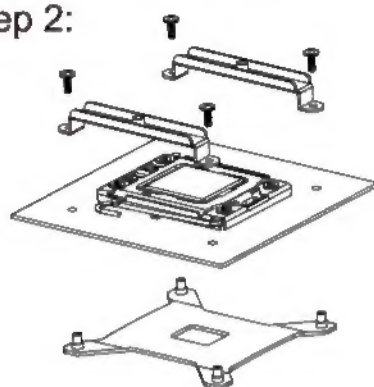

#### Step 2 : Bracket Mount Installation

Use the four M3x0.5 screws to secure the 1366 bracket mount to the 1366 backplate with the motherboard in between.


### Step 3:

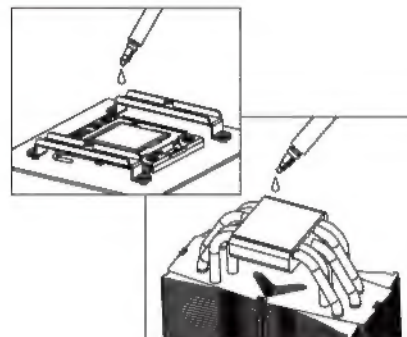

#### Step 3 : Thermal Paste Application


Apply a thin layer of thermal paste across the surface of the CPU and the heatsink bottom.

### Step 4:

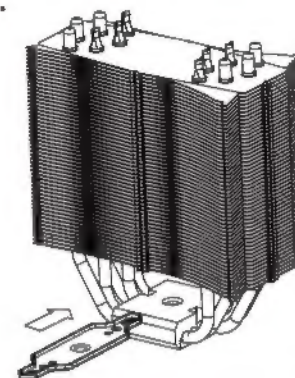


Step 4 : Slide the mounting plate through between the heatpipes and place it in the dimple on top of the heatsink base.

### Step 5:

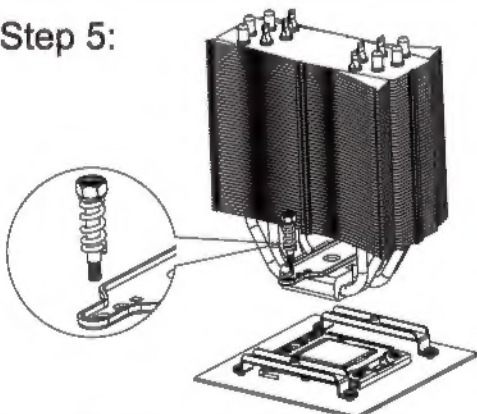

Step 5 : Place the heatsink on top of CPU and secure in place by tightening on the spring loaded screws.

### Step 6:

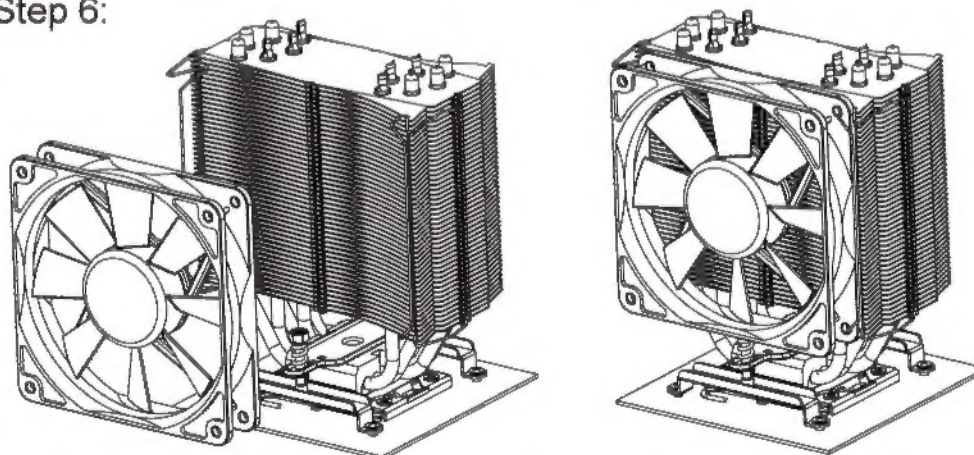

Step 6 : Place a 12cm fan to the heatsink and pull fan clip to hook into fan mounting holes. Plug in for power.